

Contents

- 1 Quick Start**
- 2 Product Specification**
- 3 Health and Safety and Regulatory Information**
- 4 How the OPC-N3 works**
- 5 PM Measurement**
- 6 Sampling the environment**

Connecting and running the OPC

- 7 Connecting Power and Taking Readings**
- 8 Running the OPC-N3 using the Alphasense software**
 - Installation
 - Data Display and taking measurements
 - Other software functions
- 9 Standalone mode (Recording to onboard SD card)**
- 10 Running the OPC-N3 using direct API control**
- 11 Revision Control**
- 12 Appendices**
 - A. FAQs
 - B. Installing the device driver
 - Windows XP
 - Windows 7
 - Windows 8, 8.1 and 10
 - C. Updating Firmware
 - D. Summary of firmware commands
 - E. Checksum

1 Quick Start

The purpose of this manual is to explain how to set up, install and use the Alphasense Optical Particle Counter OPC-N3 for measuring PM_1 , $PM_{2.5}$ and PM_{10} , as well as measuring particle size distributions in real time. Note it is also possible to set the unit up to measure $PM_{4.25}$.

When using this OPC for the first time we recommend that you use the Alphasense SPI adapter. This will enable you to very quickly use the OPC at your desk by running it off a Windows PC or laptop using the Alphasense software. Apple and Unix compatible software are not available.

A full deployment package is provided on the internal SD card of the OPC-N3. The SD card can be accessed simply by attaching the OPC to your computer using a micro USB cable.


Full instructions for carrying out the installation, (specifically a driver must be installed for the SPI adapter) and for the use of the software are in Appendix B and section 8. Please note the driver and the adapter are the same as that used for the OPC-N2 but the software is different. This also means that any coding you have written or obtained for the N2 must be modified before it will work with the OPC-N3. Application note AAN701 outlines the key coding differences.

You can view the data options along with the data resolution and range when the OPC-N3 is connected to a PC running the Alphasense-supplied software. This also provides a useful reference to those customers who wish to develop their own software.

The OPC-N3 can work in standalone mode, where the data is stored directly to the onboard SD card. To make full use of these features by changing parameters it is necessary to use the supplied software or be able to send SPI commands through your own interface.

Temperature and humidity sensors are fitted as standard on the OPC-N3. Temperature and humidity compensation is not currently carried out but this will be offered in the future.

2 OPC-N3 Specification

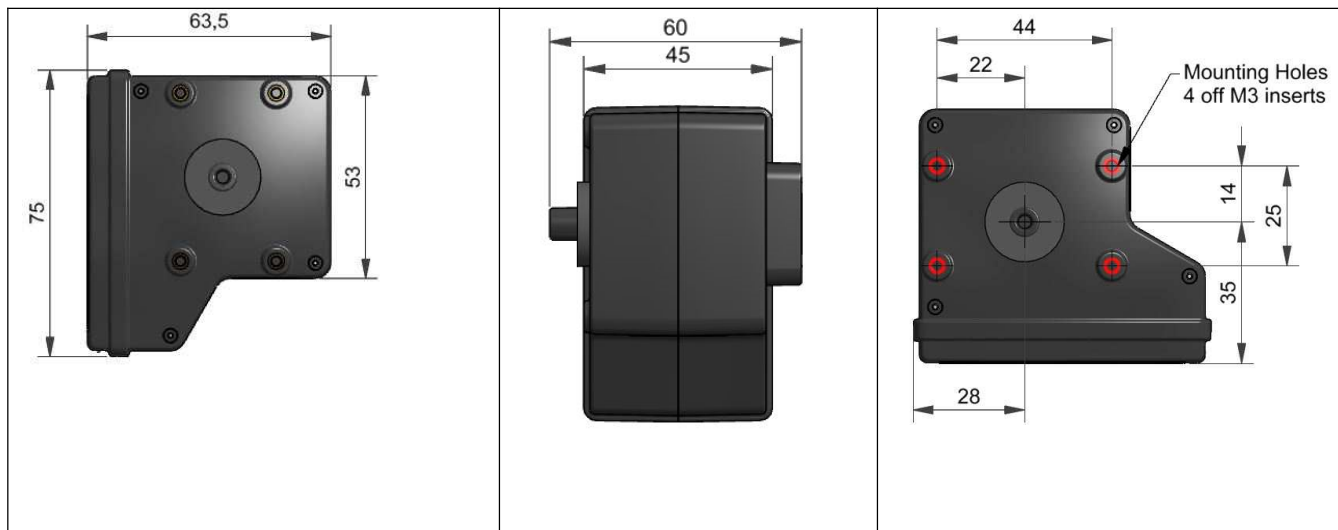

All dimensions in millimetres (± 0.15 mm)

MEASUREMENT

Particle range	(μm)	Spherical equivalent size (based on RI of 1.5+i0)	0.35 to 40
Size categorisation (standard)		Number of software bins	24
Sampling interval (seconds)		Histogram period (recommended)	1 to 30
Total Flow rate (max fan speed)	L/ min		5.5
Sample flow rate	mL/ min		210
Max particle count rate	Particles/ second		10,000
Detection limits (PM ₁₀)	Minimum		0.01 $\mu\text{g}/\text{m}^3$
	Maximum (electronic limit)		1 500 mg/m^3
Coincidence probability	%	at 10^6 particles/ L	0.8

POWER


Measurement mode	mA	180
Non-measurement mode	mA Laser and fan off	45
Transient power on start-up	mW for 1 ms	<5000
Voltage range	V DC	4.8 to 5.2

KEY SPECIFICATIONS

Digital Interface		SPI (Mode 1)
Laser classification	as enclosed housing	Class 1
Temperature range	$^{\circ}\text{C}$	-10 to 50
Humidity range	% rh (continuous)	0 to 95 (non-condensing)
Weight	g	< 105

Table 1. Power and environmental performance limits

3 Health and Safety

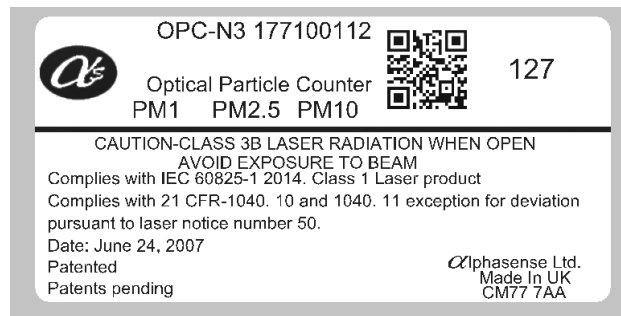

The OPC-N3 uses an embedded diode laser that operates at typically 5-8 mW (max. 25 mW) at a wavelength of 658 nm. The OPC-N3 is a Class 1 laser product, since the user does not have access to the laser source. The OPC-N3 is designed for OEM use, normally mounted in a secondary housing. The user must not open or adjust any parts of the OPC-N3. It is the user's responsibility to ensure that the unit is used safely and complies with any local regulations. **Do not remove any safety stickers or warnings.**

DO NOT remove the external housing: this not only ensures the required airflow but also protects the user from laser light. Removal of the casing may expose the user to Class 3B laser radiation. You must avoid exposure to the laser beam. Do not use if the outer casing is damaged- return to Alphasense. Removal of the external housing exposes the OPC circuitry which contains components that are sensitive to damage by static discharge.

4 How it Works

Like conventional optical particle counters, the OPC-N3 measures the light scattered by individual particles carried in a sample air stream through a laser beam. These measurements are used to determine the particle size (related to the intensity of light scattered via a calibration based on Mie scattering theory) and particle number concentration. Particle mass loadings- PM₁, PM_{2.5} and PM₁₀, are then calculated from the particle size spectra and concentration data, assuming a particle density and refractive index (RI). Default settings are: density 1.65 g/ml, RI 1.5+i0. Respiratory profiles are included in the PM calculations. It is also possible to select PM_{4.25} instead of one of the other PM values.

The OPC-N3 contains 10 weighting index sets, each comprising a weighting value for each of the 16 size bins. Index Set 0 can be adjusted by the end user; the other 9 are factory set (See later for more information).

The OPC-N3 classifies each particle size, at rates up to ~10,000 particles per second, recording the particle size to one of 24 "bins" covering the size range from 0.35 to 40 µm. The OPC-N3 will detect ~100% of particles at 0.35 µm and ~50% at 0.3 µm. Please note the maximum particles per second and the maximum mass detectable are based on the potential performance of the electronics and will be reduced in actual measurements. OPC-N3s have measured PM₁₀ values of 10 000 µg/m³. To carry this out the OPC automatically switches between a high gain and low gain mode and combines the data, note this means that the histogram sampling period is half of the repeat interval. The additional range is designed to enable pollen and other bio-particles to be measured; the collection efficiency of large mineral dust particles is likely to be lower due to rapid sedimentation in the environment.

The resulting particle size histograms can be evaluated with user-defined sampling times from 1 to 30 second duration. Longer times in dirty environments with high particle concentrations can result in the bins "over filling". If longer periods are needed it is recommended to undertake the averaging of

shorter measurement periods. This histogram data is transmitted via an SPI interface to a host computer.

The OPC-N3 is designed to minimise particle deposition within the unit and thus allow for prolonged unattended operation in dusty environments. The flow path has been modified with respect to the OPC-N2 to reduce turbulence and the fan can be run at reduced speeds to further reduce turbulence and potential particle deposition when ambient particle levels are high, units are supplied set at 255 max flow.

Consistent with most commercial Optical Particle Counters (OPCs), all particles, regardless of shape are assumed to be spherical and are therefore assigned a 'spherical equivalent size'. This size is related to the measurement of light scattered by the particle as defined by Mie theory, an exact theory to predict scattering by spheres of known size and refractive index (RI). The OPC-N3 is calibrated using Polystyrene Spherical Latex Particles (PSLs) of a known diameter and known RI. Correction factors can be applied for errors resulting from particles of different density or refractive index.

5 PM measurements

The particle size histogram data recorded by the OPC-N3 sensor can be used to calculate the mass of airborne particles per unit volume of air, expressed as $\mu\text{g}/\text{m}^3$.

The accepted international standard definitions of particle mass loadings in the air are $\text{PM}_{2.5}$ and PM_{10} ; PM_1 is not yet an international standard. These definitions relate to the mass and size of particles that would be inhaled by a typical adult.

The OPC-N3 calculates the respective PM values according to the method defined by European Standard EN 481. Conversion from the 'optical size' of each particle as recorded by the OPC-N3 and the mass of that particle requires knowledge of both particle density and its RI at the wavelength of the illuminating laser beam, 658 nm. The OPC-N3 assumes an average RI value of $1.5 + i0$. The OPC-N3 allows a different value to be set for each size bin to correct for particle density variation with particle size. The OPC-N3 has 10 bin weighting indexes, one is adjustable by the end user and 9 are factory set.

Bin weighting index 2 assumes a Particle Density value of 1.65 g/ml, a figure that equates to a typical value found in many environments. We would recommend using this in most applications. Bin weighting index 0 can be modified by the end user; default setting is currently 1 for all bins.

Where it is known that different size fractions in the ambient aerosol have different densities (for example, the smallest carbon particles will have a higher density than larger aggregates of the same particles); different Particle Density values may be set for different bins to achieve a more accurate determination of PM. The other indexes will be preset with values adjusted for common ambient environments and to ensure that the OPC-N3 matches better to standard reference instruments when used in the field and to correct for some of the missing mass below the OPC detection limit. Contact Alphasense on how to modify standard settings.

6 Sampling the environment

The sample air flow rate through the unit is determined by both the fan speed and any obstruction that affects the inlet or outflow of the OPC. Therefore tubing, valves, baffles or obstructions that will restrict airflow into or out of the OPC should be avoided. Particle distributions can also be affected by sharp turns and narrow sample pipes. The maximum pressure drop through the entire flow system must be less than 40 Pa.

However, because fan speed can vary, the sample flow rate through the OPC may vary also. Such variations are monitored and corrected dynamically by the OPC so that the particle concentrations and derived PM values are unaffected by moderate flow variations (patent pending).

The OPC-N3 unit will operate adequately on its own on the bench, however it will need to be placed in a secondary housing for use in the field.

Alphasense recommends that the OPC-N3 inlet is exposed directly to the target sample volume and that the fan exhausts into an unconstrained space. The OPC-N3 can be positioned in any orientation,

but to mitigate the effects of wind direction on sampling it is best for the inlet to be pointing upwards. When mounted pointing upwards care should be taken to avoid very large droplets or soot and grit from entering the unit due to gravity. We recommend an “umbrella” or mushroom to protect the inlet without interfering with particle flow. Coarse gauze filters can also be used to prevent the ingress of large particles or insects without interfering with the particles being measured. All electrical connections must be protected from moisture and temperatures outside of the operational range. The temperature and humidity sensor is mounted on the OPC-N3 PCB. The values reported may not represent the actual ambient conditions. Particle sizes are currently uncorrected for humidity but this will be offered in the future

Connecting and Operating The OPC N3

7 Connecting power and taking readings

The OPC-N3 is shipped pre-calibrated with the fan at full speed. There are no user serviceable parts. Power and data communications are provided via the SPI socket and firmware updates also. The USB connector is only used to access files on the SD card.

Connection to the OPC-N3 for real-time data transfer can be made via the SPI direct to your own circuit's internal bus using your own or the SPI interface provided by Alphasense, this must be ordered separately. The SPI interface supplied by Alphasense requires a USB A-B lead to connect to the USB port of a computer. The green LED shows that power is supplied to the OPC-N3 and the red LED flashes when the PC and OPC-N3 are communicating.

SPI Connection

The SPI socket is a Molex 'Pico Clasp' 6 way Housing, Part Number 501330-0600. Pins are assigned in table 2.

Pin	Function
1	Vcc
2	SCK
3	SDO
4	SDI
5	/SS
6	GND

Table 2. SPI pin assignments

OPC power requirement

The OPC-N3 requires a 4.8 to 5.2 Volt DC supply with minimal electrical noise, (< 30mV pk-pk). This is stepped down to a 3v3 supply (via the SPI-ISS adapter) for the SPI logic lines. Except for the Slave-Select logic line, the SPI interface lines are 5V tolerant but we recommend to run all at 3v3. The OPC-N3 requires, 180 mA with a short 1 A transient at switch-on; check that the current limit is not exceeded if multiple units are operated from a shared power supply

It is recommended to allow 2 seconds for the OPC to respond to the first SPI command after power-up and >0.6 s after a switch peripherals/fan on sequence.

Software interface configuration

The following interface rules will help you to make a reliable connection with the OPC.

1. Set up SPI interface as follows:
SPI Mode1 (clock idle low, data transmitted on clock leading edge).

- Set SPI frequency to between 300 kHz and 750 kHz.
2. SPI Master system must drive MOSI and SCK and SS communication lines.
 3. Delay between a command byte and any subsequent bytes of an SPI communication should be $> 10\text{ ms}$ ($< 100\text{ ms}$).
 4. Delay between final byte of one SPI communication and first byte (command byte) of the next SPI communication should be $> 10\text{ ms}$ ($< 100\text{ ms}$).
 5. Interval between bytes following the command byte of an SPI communication should be $> 10\text{ }\mu\text{s}$ ($< 100\text{ }\mu\text{s}$).
 6. Under certain circumstances the intervals may need to be longer i.e. the interval between one 'Get Histogram' communication sequence and the next should be between 1 s and 30 s and no greater than 60 s. The interval after a 'Switch Peripherals/Fan on' sequence should be $> 600\text{ ms}$ ($< 2\text{ s}$) to allow the firmware time to perform multiple attempts to switch the fan on. Normally users should allow a much longer time than this anyway e.g. 5-10 s to allow the fan to get up to speed. Following power-up, the OPC should be allowed at least 2 s to initialise before beginning SPI communication.
 7. The first histogram data set in a session, or the first histogram obtained after any kind of error condition has passed, will have been recorded over an unknown sampling period and should be discarded.
 8. The timings and SPI frequencies specified are guidelines only. Users may experiment with different timings at their own risk.
 9. The SS connection to the OPC should be driven LOW during any SPI communication with the OPC.

OPC SPI Commands

A full list of current SPI commands given in 072-0503 Supplemental SPI information for OPC N3, a summary is listed in Appendix D. Further information is available from Alphasense directly.

8 Using the Alphasense Software

The software and necessary drivers to run the OPC from a computer (PC only) will be supplied on the onboard SD card. Note the software for the OPC-N3 is different than that for the OPC-N2

Full guided examples for installation using Microsoft Windows XP, 7, 8, 8.1 and 10 are given in Appendix B. We recommend that the Windows PC is running .NET version 3.5 or above.

Connecting the device and running the software

Connect the USB-SPI interface lead and OPC device to the PC. If you are prompted for device drivers refer to the previous section of the user manual. Double click the OPC-N3.exe icon to start the software application. When the application is first started the main form will be in "start-up mode" as shown in the next section.


Connect to the OPC-N3 by choosing the virtual COM port it is assigned to. Text should appear in the software's main text box indicating details of the OPC on successful connection. At this stage the OPC electronics are in default mode and the laser and the fan are switched off. Press Ctrl + R to read the configuration variables stored on the OPC.

There is no uninstall function for the software interface. The interface is stored as a set of files in a single folder (to be kept intact) and will run as a normal Windows application. The entire folder can be deleted or archived when redundant.

Data Display Screens and taking Measurements

Default start-up screen


Select the allocated COM port: A list of COM ports available on the PC/Laptop is displayed in the drop-down menu at the bottom-left of the screen. Select the correct port number; the software will not respond unless the port with the attached OPC-N3 device is selected.

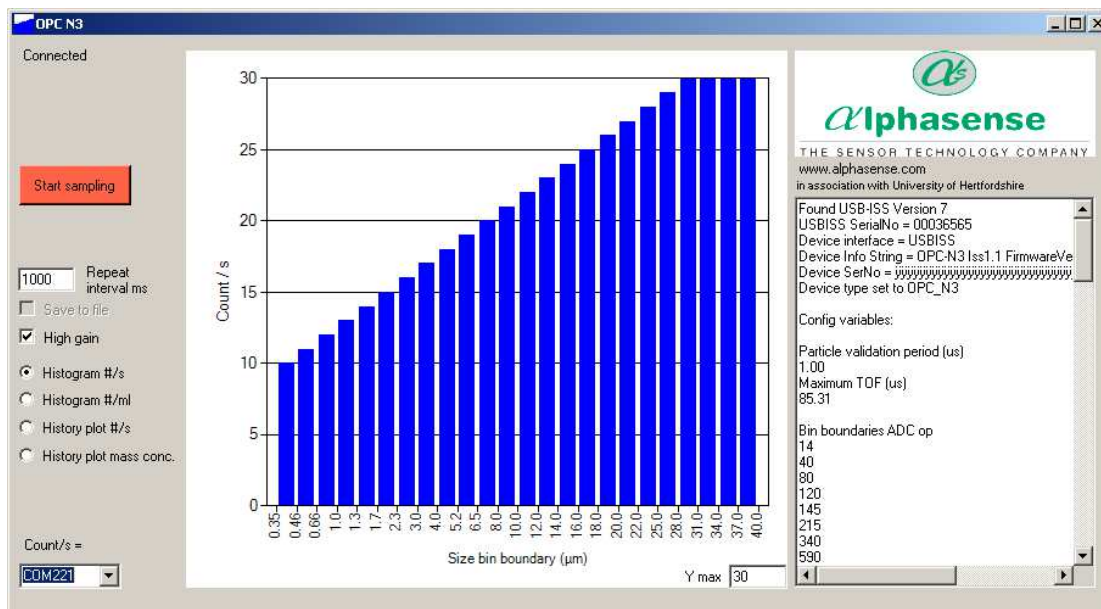

- **Device information** (Right hand side text window): This shows hardware serial number and firmware versions, and config values currently installed on the OPC-N3.
- **Start sampling:** Starts data. The button will then show 'Stop sampling' to allow termination of the sampling process.
- **Laser and fan controls:** This can be accessed by typing Ctrl + L. Clicking the laser and fan boxes turns the lasers and fan on. Note that changing the laser power will alter the unit's response and will put the unit out of calibration. Fan speed can be varied on the OPC-N3; reducing the fan speed in high dust environments can improve the devices resistance to dust contamination/fouling.
- **Repeat interval ms:** Sets the duration (in milliseconds) over which a particle size histogram is acquired. The default is 1,000 ms. We recommend a maximum of 20,000 to 30,000 ms to avoid the risk of an individual size bin becoming full (65,536 counts). Longer intervals can be set in very clean environments.
- **Y max:** This sets the maximum y-axis value of the histogram screen display
- Histogram y-axis '**Counts/ s**': This displays the recorded counts per second in each size bin, regardless of the setting of the 'Repeat interval ms'. For example, if a 10,000 ms sampling interval is set, the 'Counts/ s' figure will represent the average counts per second over that period. This average figure is also recorded in the CSV file.
- High gain tick box
 - Default ticked, high and low gain activated
 - Unticked, low gain only
 - Tick again, high gain only
 - To activate both ranges again a power cycle is required

Histogram Counts/s vs Particle Size display mode


When the **Start sampling** button is pressed, the OPC-N3 will first ask if the data are to be saved. Once answered, it will begin to display particle size histogram data and if selected it will store data to a specified file.

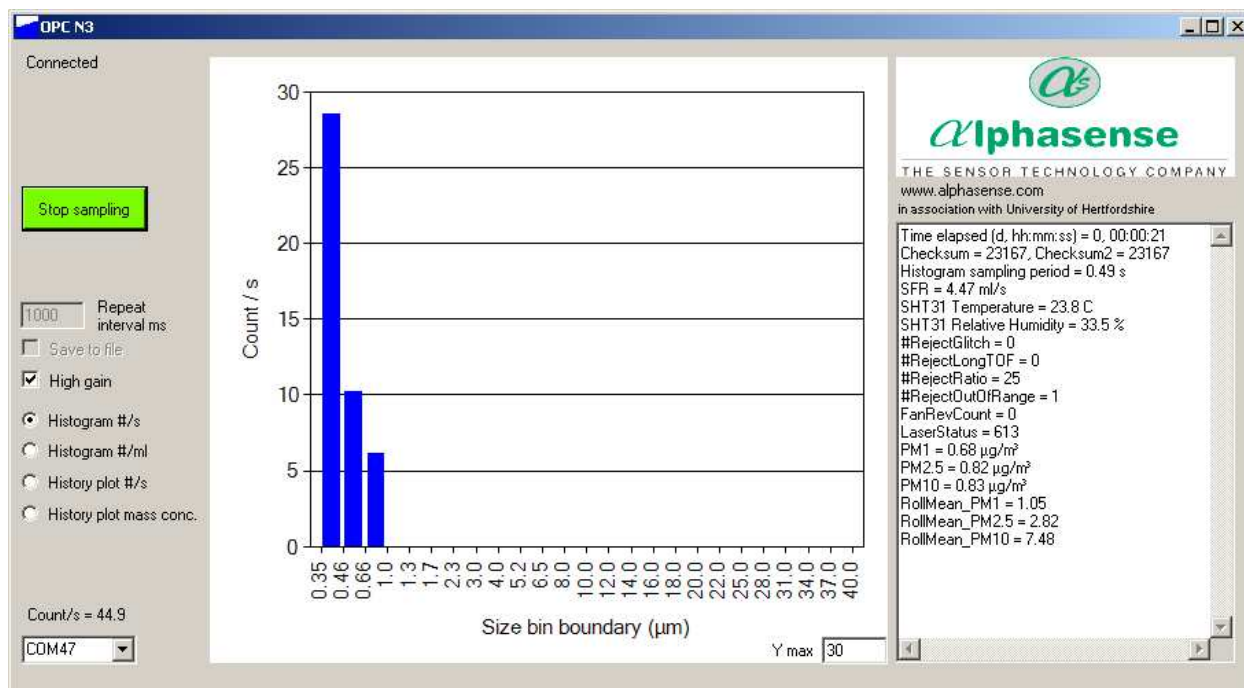

- Data relating to each acquired histogram, including PM values, is given in the right-hand window of the display. The RollMean_PM10, etc., are the current rolling mean values for PM evaluated over the previous 5 minutes or to the beginning of sampling if that is less time. The sample flow SFR, and temperature and humidity are also given.
- Reject Glitch and RejectLong TOF are an indication of the electronic noise and errors in timing, respectively. High values could suggest a problem with the unit or the set up. FanRev count is currently unused. The Laser status gives an indication of current draw of the laser and hence laser function a value of between 550 and 650 is typical of standard operation.
- The total particle count rate per second across all size bins (Counts/ s) is displayed in the bottom-left of the screen.
- Clicking on the graph and pressing 'l' (lower case L) will display the values for each bin; pressing 'l' again will toggle it back.


Histogram Number Concentration vs Particle Size display mode

Click the 'Histogram #/ml' button on the left-hand side of the screen to show the recorded data in particle number concentration (particles per millilitre of sampled air) format, as below:

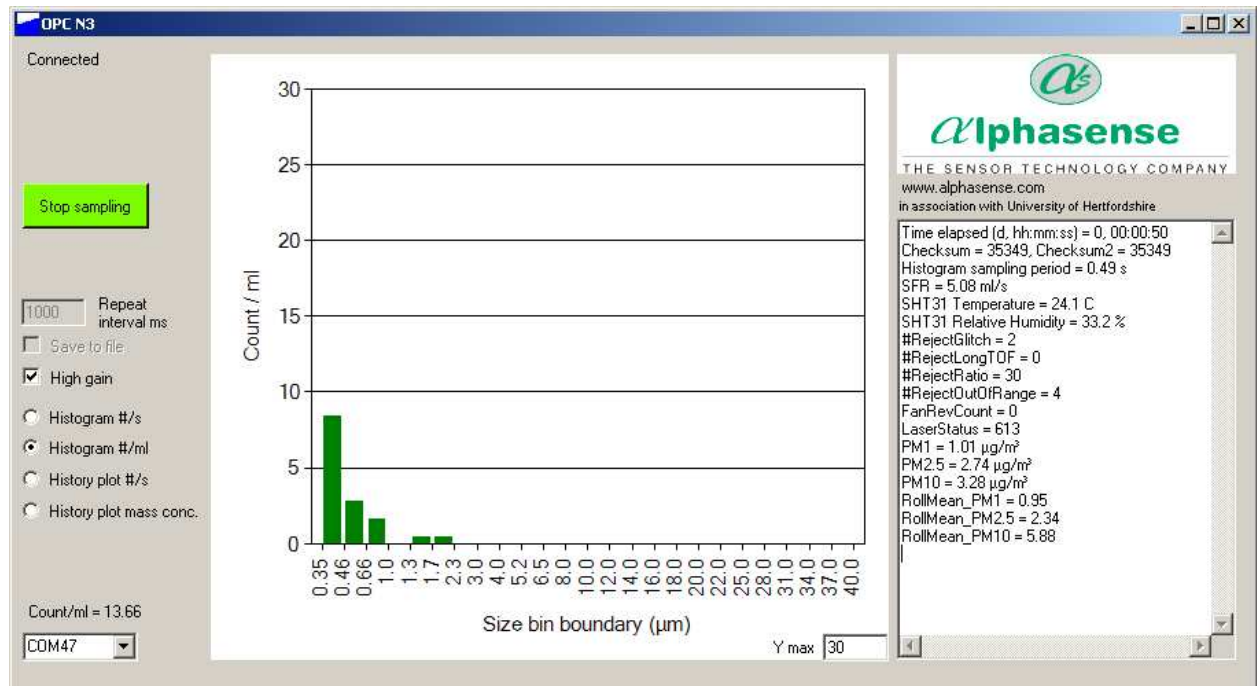


History Plot of Counts/s display mode

Click the 'History plot #/s' button on the left-hand side of the screen to show a temporal record of the particle count rate since the start of the sampling session. The plot scale will automatically change to show longer recording time periods and/or increasing Counts/ s.

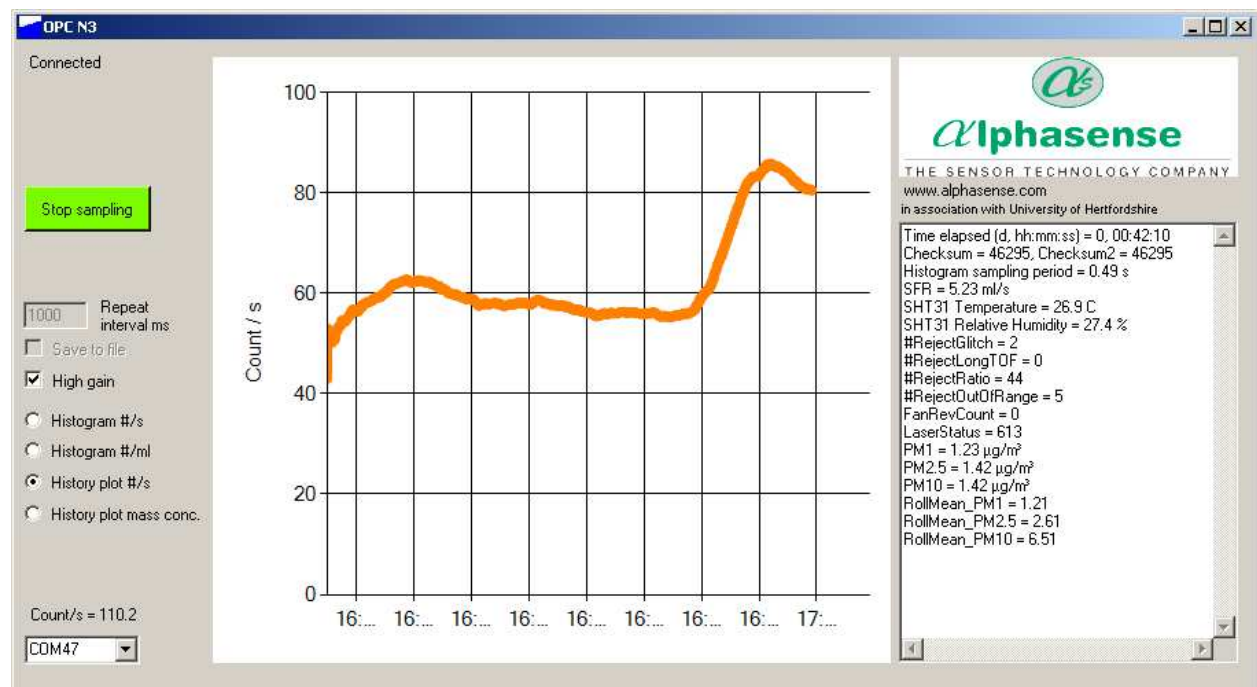

History Plot of Mass Concentration display mode

Click the 'Histogram plot mass conc.' Button on the left-hand side of the screen to show a temporal record of PM₁, PM_{2.5} and PM₁₀ values (in µg/m³) since the start of the sampling session. The plot scale will automatically change to show longer recording time periods and/or increasing PM values.

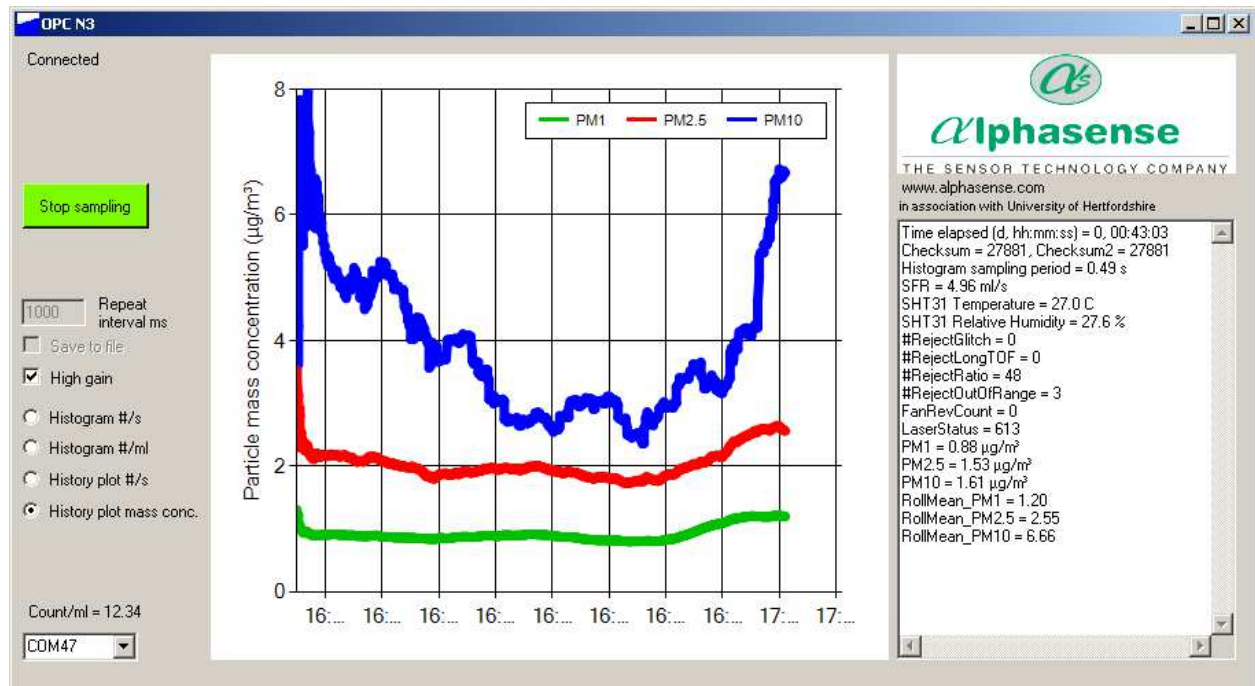

Data relating to each acquired histogram, including PM values, is given in the right-hand window of the display.

Other Software Functions

Closing down the software

It is recommended that the software application is closed before removing the USB to SPI interface to avoid USB communication errors.

Log file

The application will also create a log file from all of the output bins into a single .CSV file. You will be asked if you require a log file after selecting the "start" button. If you select "yes" you will be prompted for a file name and location to store the file. An example of the log file is included in the deployment package and the CSV output is explained later.

Firmware information

The information window on the right of the main form shows the firmware version installed as the software first loads up. For example

Device Info String = OPC-N3 Issue 1.1 FirmwareVer=1.17.....BS

Firmware is upgraded via the SPI port using a Bootloader tool, see Appendix C for more details.

More firmware commands (via software)

There are four commands that can be used to edit factory settings through the OPC software:

1. Ctrl + R: Read and display all configuration variables. This will display the variables available to the user for edit. The data is displayed in the information window to the right of the software window. Changeable values can be over-written in this window.


2. Ctrl + W: Write all values to configuration memory. This command will write the current configuration values to volatile memory, this means that the user can run the OPC with their desired configuration, but the changes will be reset once the power is disconnected.
3. Shift Ctrl + W: This allows the Bin weighting Index to be changed.
4. Ctrl + S: Save all values to configuration memory. This command will write the current configuration values to non-volatile memory, this means that the user can permanently save their configuration values.

Changing the PM values reported

The PM values can be changed to report PM_{4.25} instead of one of the other PM values. Please note only 3 values in total can be reported. To carry this out connect the OPC-R1 to the Alphasense software as usual. Then:

1. Type Ctrl + R: Read and display all configuration variables. This will display the variables available to the user for edit. The data is displayed in the information window to the right of the software window.
2. Scroll to the bottom:

PM values (A, B, C) (um)
 1
 2.5
 10
3. Overwrite one of these values with 4.25
4. Type Ctrl + W, followed by Ctrl + S.
5. The OPC will now report PM_{4.25}

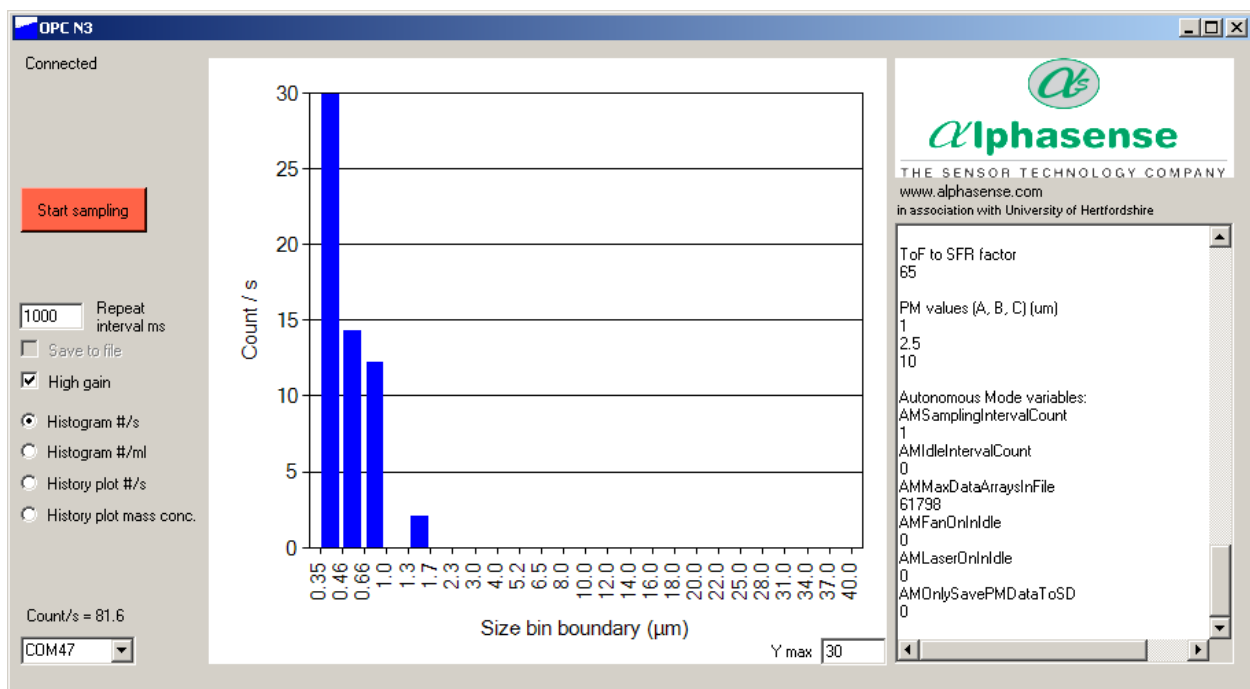

Explanation of the CSVs

(Please note sheets are truncated to save space)

								Comment
Software ver: OPC-N3 Alphasense 1.0.6457.18465								
Device SerNo		OPC-N3 177100110						Unit serial number
InfoString		OPC-N3 Iss1.1 FirmwareVer=1.17.....BS						Firm ware version
Laser digital pot setting		210						Laser setting
Fan digital pot setting		255						Fan Setting
ToF to SFR factor		56						Scaler for dynamic fan speed correction
Bins		Bin00	Bin01	Bin02	Bin03	Bin23	Bin23 (upper boundary)
Bin low boundary (ADC o/p)		14	40	80	120	25140	27158
Bin low boundary (particle diameter [um])		0.35	0.46	0.66	1	37.	40
Bin mean (particle diameter [um])		0.41	0.56	0.83	1.15	38.5	
Vol of a particle in bin (um ³)		0.035	0.092	0.299	0.796	29880	
Weighting for bin		1.65	1.65	1.65	1.65	1.65	Individual bin weighting

Data:	Bin00	..	Bin23	Mean ToF Bin1 (us)	...	Mean ToF Bin7 (us)	Count/s	Samp ... Period (s)	SFR (ml/s)	Temp (C)	Rel. Hum. %	#Reject Glitch	Laser Status	PM1 (ug/m3)	..	PM10 (ug/m3)	Roll Mean_ PM1	..	Roll Mean_ PM10
43109.87088	180.8	..	0	9.67	...	0	208.8	0.99	4.65	29.3	39.2	29.3	39.2	7.71	..	13.58	7.71	..	13.58
43109.87089	185.7	..	0	10	...	0	209.2	0.98	4.63	29.4	39.5	29.4	39.5	7.49	..	8.11	7.6	..	10.85
43109.8709	188.7	..	0	10.33	...	0	206.2	0.97	4.6	29.4	39.8	29.4	39.8	7.25	..	7.81	7.48	..	9.84
43109.87091	199.0	..	0	10.33	...	0	232.7	0.98	4.57	29.4	39.9	29.4	39.9	9.33	..	15.64	7.94	..	11.29
43109.87093	203.1	..	0	10	...	0	230.6	0.98	4.58	29.5	39.9	29.5	39.9	8.39	..	106.2	8.03	..	30.27
43109.87094	179.2	..	0	10.33	...	0	202.1	0.96	4.56	29.5	39.7	29.5	39.7	7.62	..	8.52	7.96	..	26.65
43109.87095	165.3	..	0	9.67	...	23	192.9	0.98	4.6	29.5	39.5	29.5	39.5	7.36	..	8.29	7.88	..	24.02
Counts per s in each bin				Used for dynamic fan compensation			Total counts per s across all bins	Sample flow through the OPC		Noise and invalid particle error indicator and status			Instantaneous PM1, 2.5, 10			5 minute averaged PM1, 2.5, 10			

9 Standalone mode (Recording to onboard SD card)

If the OPC-N3 unit is powered but receives no SPI communication for ~ 65 s it starts running and logs data to the on-board SD card. The default settings are such that it will run with the fan and laser on continuously and record a histogram every ~1.4 s. Every ~24 hours a new data file is recorded and the files are numbered sequentially.

Please note the histogram records total counts in the 1.4 s time period and does not quote an average figure in counts/s. The unit does not have a real time clock so any break and resumption in power will result in the next numbered file being created.

Autonomous Mode Variables

The easiest way to access these is to use the supplied Alphasense Software. The variables can be changed by SPI commands using your own system if preferred (See the commands list summary in Appendix D for details).

Connect the OPC-N3 to the software in the standard manner. Type Ctrl + R and scroll to the bottom of the text list. Listed here are the Autonomous Mode variables. The variables listed in table 3.

Command	Description	Default
AMSamplingInterval count	The number of 1.4 s samples taken for each measurement	1
AMIdleInterval count	The number of 1.4 s periods between each measurement	0
AMMaxDataArraysInFile	The number of saved histograms per CSV (default is 24 hours of continuous 1.4 s measurements)	61798
AMFanOnInIdle	Selects if the fan is on or off during the idle phase	0
AMLaserOnInIdle	Selects if the fan is on or off during the idle phase	0
AMOnlySavePMDDataToSD	Selects full data or PM data only to be saved	0

Table 3. Autonomous Mode Variables

When running with an Idle Interval the unit automatically runs the fan and laser for a period of 7 x ~1.4s cycles before starting the measurement. This allows the laser and fan to come up to full power. As a result, in the CSV file the Data RequestInterval(s) is the total time of the cycle, so includes the Idle Interval, the warm up time and the measurement time, the SamplingPeriod(s) is the time taken for the active measurement.

To alter these variables, type the new value in the window, then press Ctrl + W, and confirm that you want to change the current OPC configuration then type Ctrl + S: Save all values to configuration memory, and again confirm it. The OPC should then be disconnected from the software and unplugged and will start logging when powered up again.

10 Running the OPC N3 using direct SPI control

Full details of the SPI commands and connections are available for the OPC-N3. This should be sufficient for the user to be able to design their own SPI system to control the device and gather data. A flow chart outlining simple operation of the OPC-N3, and a full command list, is given in 072-0503 Supplemental SPI information for OPC-N3.

If the fan and laser are switched off to reduce power consumption it is recommended that the fan and laser are powered up for a minimum of 10 s before taking a measurement.

11 Revision Control

Version	Comment	Release Date	Released by
A	First Draft	December 2017	Mark Giles
B	Second Draft	January 2018	Mark Giles
C	Third Draft	January 2018	Mark Giles
D	Fourth Draft	February 2018	Mark Giles
E	Fifth Draft (FW 1.16)	February 2018	Mark Giles
1	1 st draft (FW 1.17, range toggling information)	August 2018	Mark Giles
2	Minor additions following customer feedback	March 2019	Mark Giles




Appendix A: FAQs

- **Can the OPC be connected to a gas flow at 500 SCCM (or similar)?**
 - The OPC is designed to sample ambient air using its own fan. Connecting to a pressurised system will alter the calibration and may also lead to deposition of particles on the inside of the unit. The OPC is also designed to have air pulled through it rather than blown into it.
- **What is the effect of low pressure (altitude)?**
 - Fans are constant volume devices and so, at altitude where the air density is lower, the mass transported through the fan will be reduced but the volume is constant (assuming the fan speed remains the same). The unit should operate normally at altitude with particle size and number concentrations being accurate. However, when ambient temperatures are expected to fall to less than -10°C the system should be heated or well insulated to ensure correct operation of the OPC.
- **How are the units calibrated?**
 - The units are calibrated for sizing using controlled aerosols of monodisperse polystyrene latex microspheres of specific sizes. Aerosol number concentration is assessed by comparison to an OPC 'gold standard', previously calibrated against a certified TSI 3330 OPS instrument.
- **What maintenance can be carried out on the OPC-N3?**
 - The OPC-N3 does not have any user-serviceable parts. The fan and laser are both chosen to give good lifetimes. The flow path is designed to minimise particle deposition on any internal surfaces of the OPC. The unit must not be opened for cleaning as this may expose the worker to class 3B-laser radiation and could affect the calibration. Careful cleaning with compressed air may be successful but this should be discussed with Alphasense
- **Raspberry Pi and Arduino**
 - The OPC-N3 is ideally suited to be operated by devices such as Raspberry Pi or Arduino via its SPI interface. While Alphasense does not distribute OPC-N3 control programs to be used on these devices, many of its customers have successfully implemented such control programs following the OPC-N3 SPI commands list. An example program for the Arduino Uno is available on request.
- **Sampling time**
 - The OPC-N3 automatically switches from low to high gain. The histograms created from both gain modes are then combined to give one histogram. As a result the sampling period is ~half that of the repeat interval



Appendix B: Installing the device driver (drivers unchanged from OPC-N2)

Windows XP

Copy the folder “OPC Interface Software” to the PC desktop. Connect the USB interface lead to the PC. If the USB interface lead (USB to SPI converter) is connected to the PC for the first time, Windows will need a device driver and this will start the “Found New Hardware” wizard. Select the “Yes, this time only” option and click next.

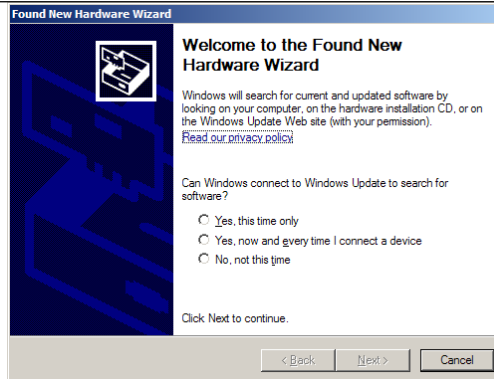


The following window will give you an option as to whether to use a CD to install the device driver or to use another location. Select “Install from a list or a specific location (Advanced)”. Navigate to the OPC folder containing the folder named “USB Driver”, this contains the file *devtech2.inf* needed to drive the OPC device.

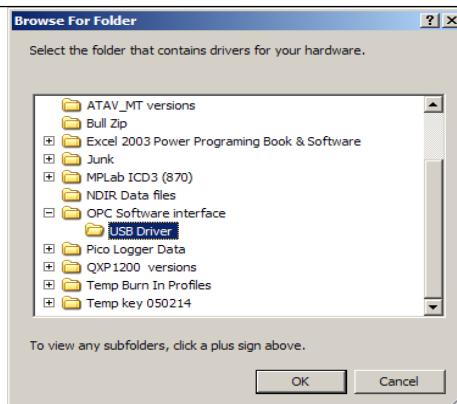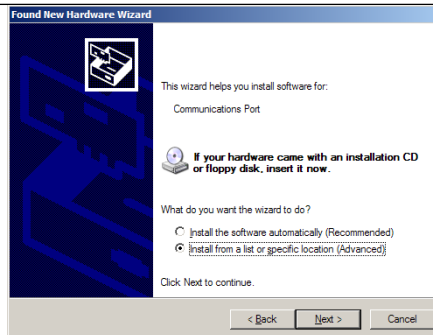

Click OK to allow Windows to locate and install the device driver. This process is automatic but you will be prompted by the form below to confirm the installation.


Click “Continue Anyway” to finish the installation. Once the device driver is installed correctly, the OPC device should appear in the Device Manager window as a “Communication Port” with an assigned COM port number. Make a note of this assigned port number, as you will need it when starting the software.

The Driver installation is now complete.

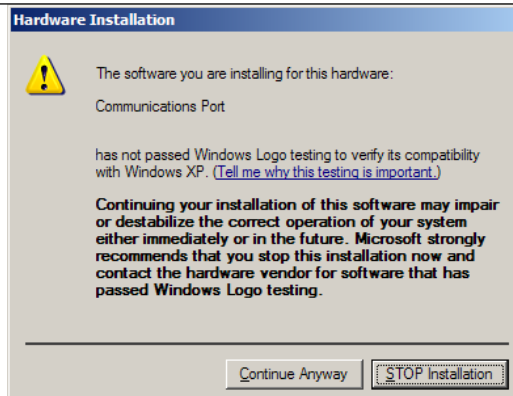


Windows 7


Copy the folder “OPC Interface Software” to the PC desktop.
Connect the USB interface lead to the PC. If the USB interface lead (USB to SPI converter) is connected to the PC for the first time, Windows will need a device driver.

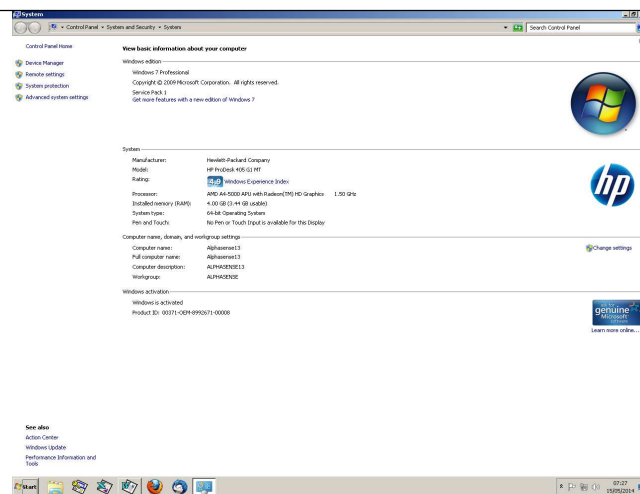


Open the system properties and locate the device manager.

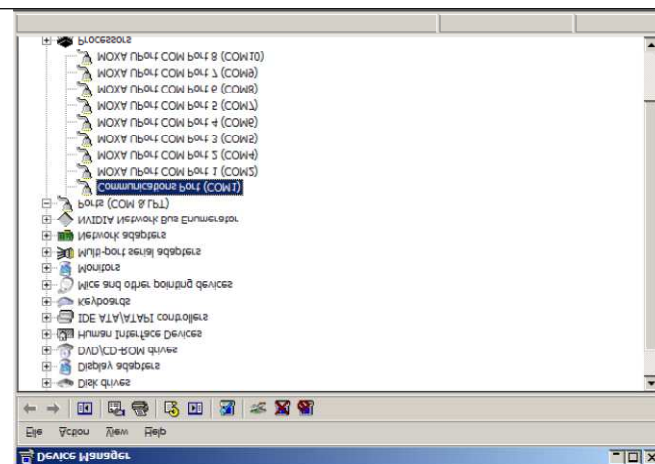


Windows 7 will show the new device as “USB-ISS” with a yellow exclamation mark indicating a driver problem.

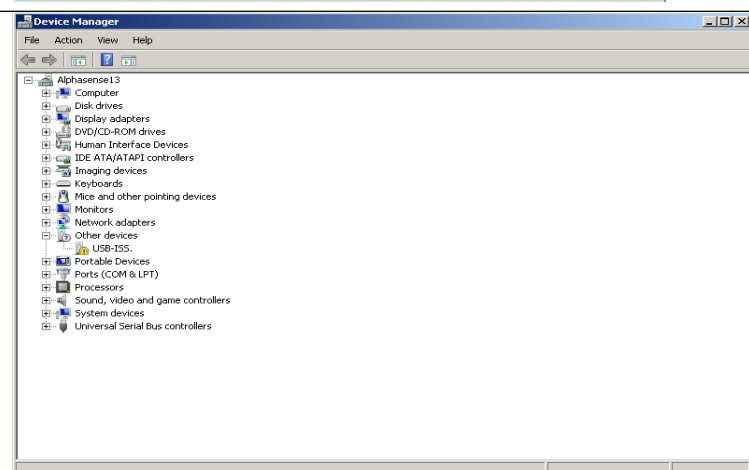


Right click the icon and select
“Update Driver Software”.

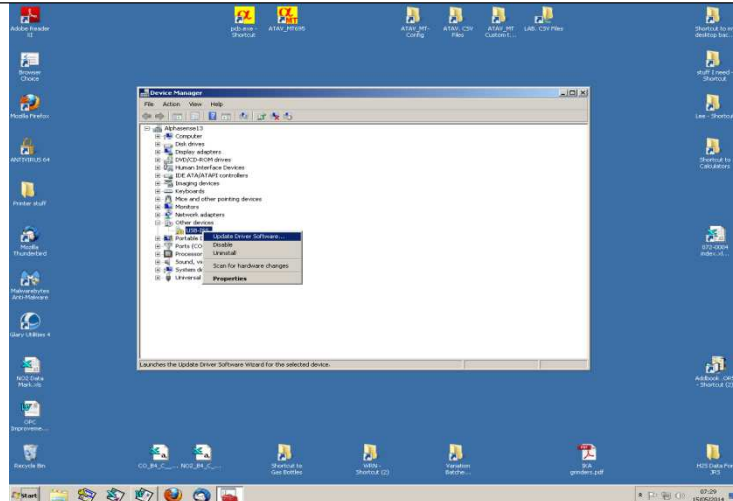


Select the “Browse my computer for
driver software” option.

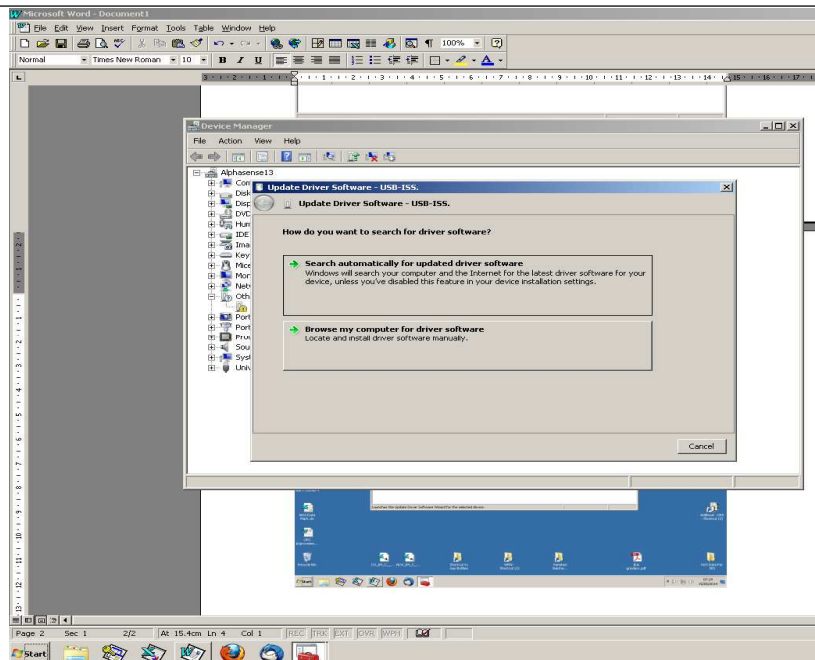


Navigate to the folder “OPC
Interface Software” copied to your
desktop and locate the folder named
“USB Driver”, Click Next.

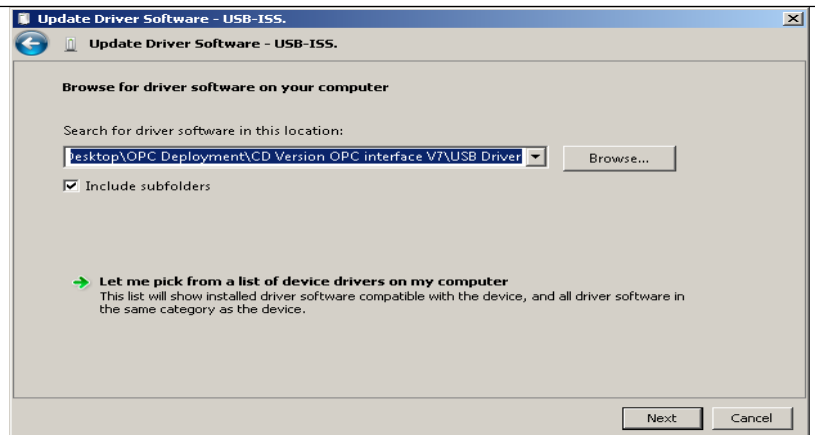


Windows 7 will then issue a security warning. This is due to a licence issue and not a concern to the operating system. Select the “Install this driver software anyway” option.

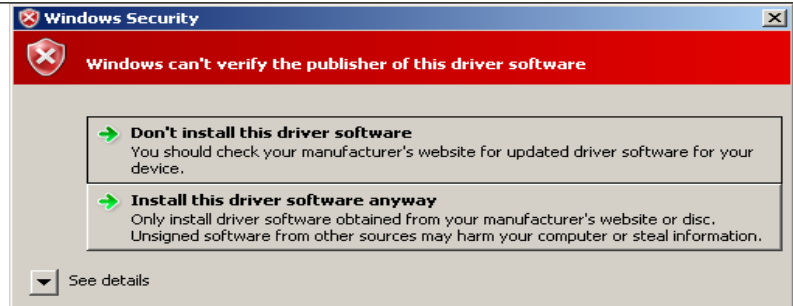

Windows will then install the driver files for the device.

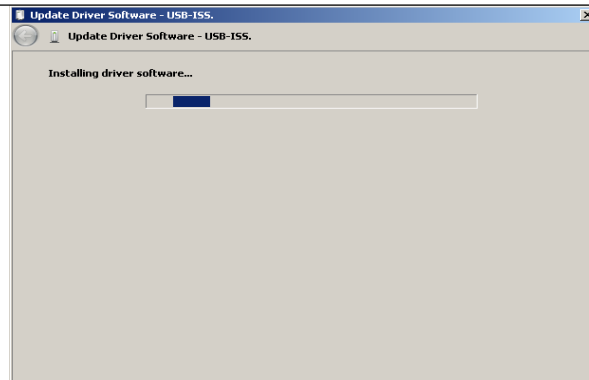


Once the device driver software has been installed the form below will be displayed. Make a note of the allocated COM port number (COM4 in the example below).

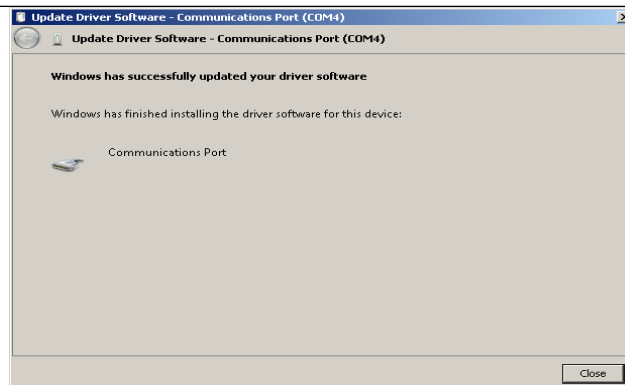

If the device driver is installed incorrectly the Device Manager will indicate this with a yellow exclamation mark symbol shown below.

If this should happen, remove the USB lead and uninstall the device by right clicking the symbol and selecting “Uninstall”. Return to the beginning of the “Installing the device driver” (Windows XP or Windows 7) section.

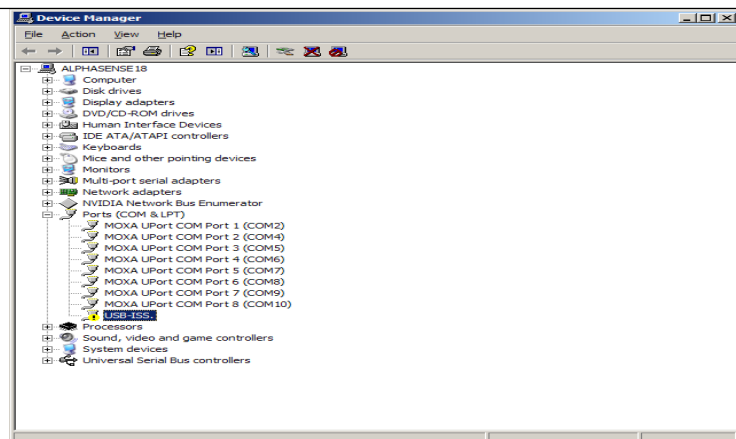




Windows 8, 8.1 and 10

This procedure will guide you through the process of disabling the digital device driver verification in Windows 8, 8.1 and 10. The method for 8.0 is different than for 8.1 and 10.


Background

64-Bit editions of Windows require digitally signed drivers. Digitally signed drivers include an electronic fingerprint that indicates which company produced the driver as well as an indication as to whether the driver has been modified since the company released it. This increases security, as a signed driver that has been modified will no longer have an intact signature. Drivers are signed using code signing certificates. The driver for the SPI converter does not have a Microsoft endorsed signature so this protection must be circumvented.


How to Disable Driver Signature Verification on Windows 8.0
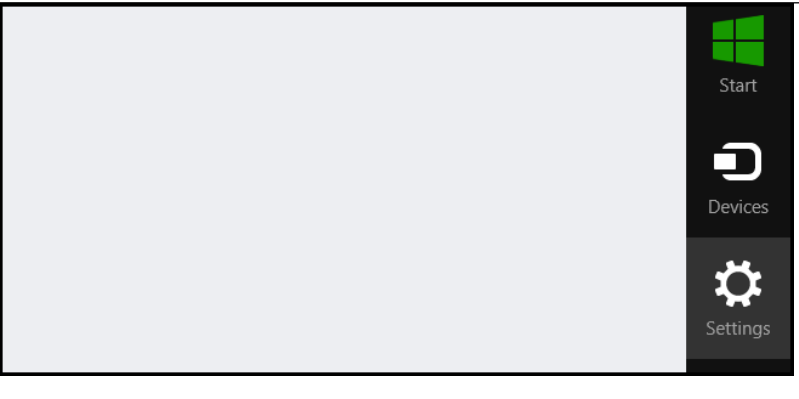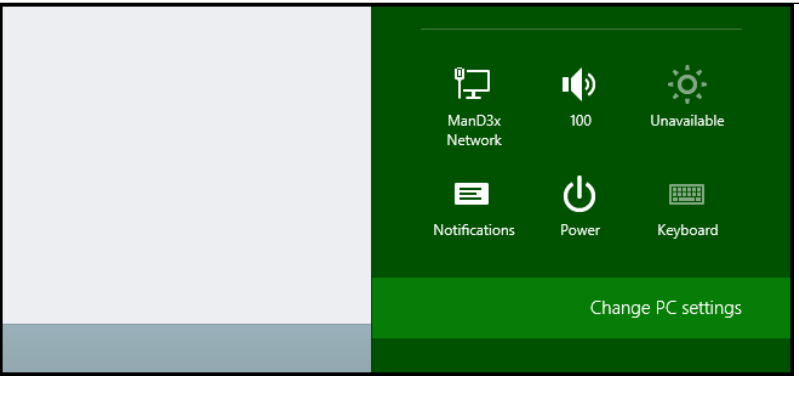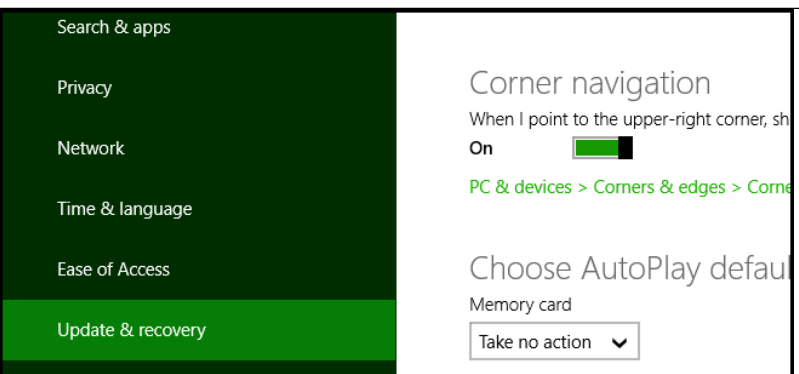
<p>Press the Win + C keyboard combination to bring up the Charms Bar, then click on the Settings Charm.</p>	
<p>We need to head into the Modern Control Panel, so go ahead and click on the Change PC settings link.</p>	
<p>When the Control Panel opens, switch over to the "Update & recovery" section.</p>	


Then click on the Recovery option on the left hand side.

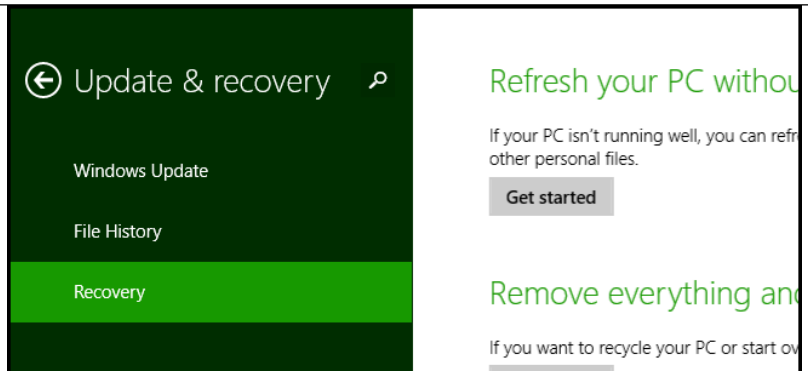


Once selected, you will see an advanced startup section appear on the right hand side. You will need to click on the “Restart now” button.



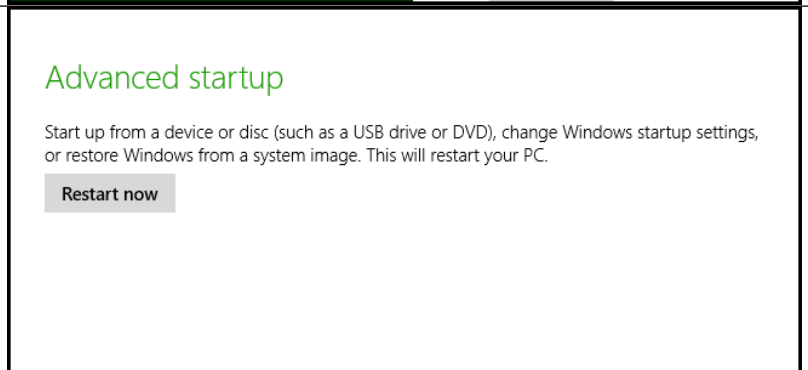


Once your Computer has rebooted you will need to choose the Troubleshoot option.




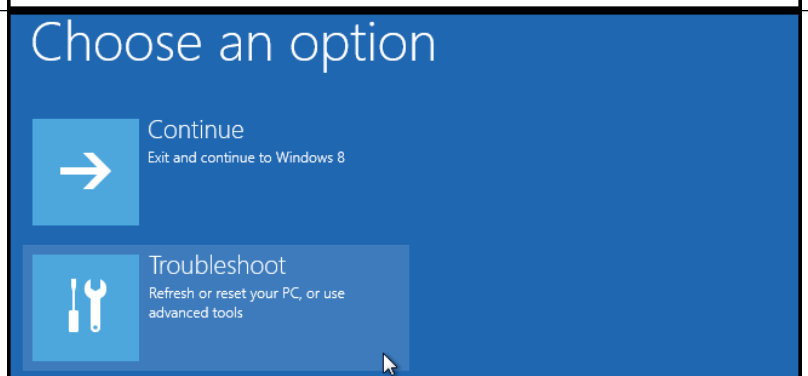


Then head into Advanced options.

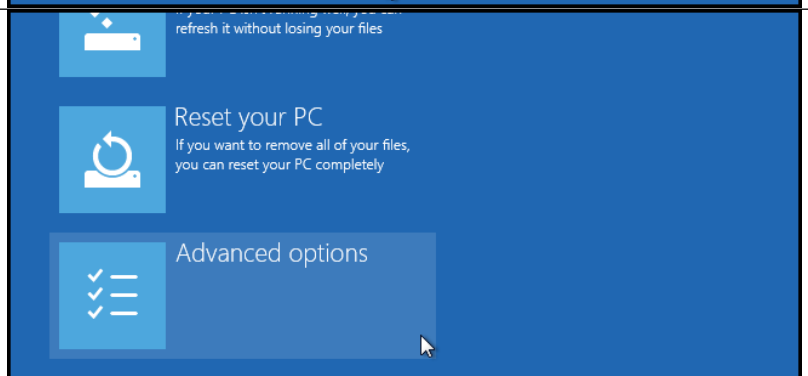
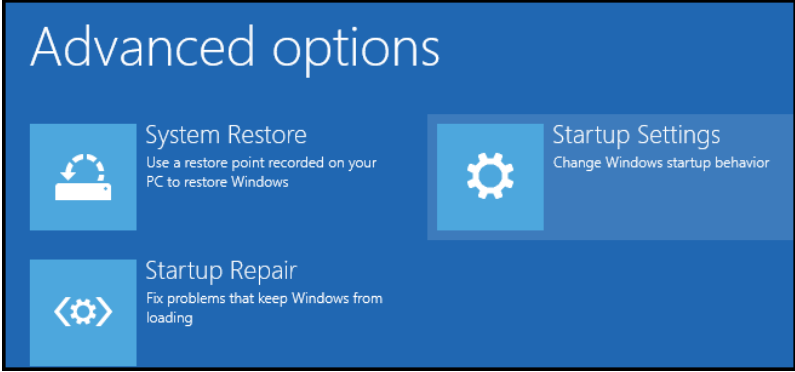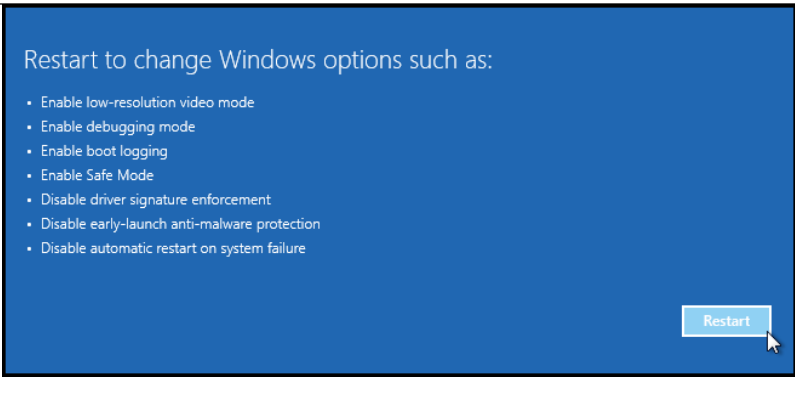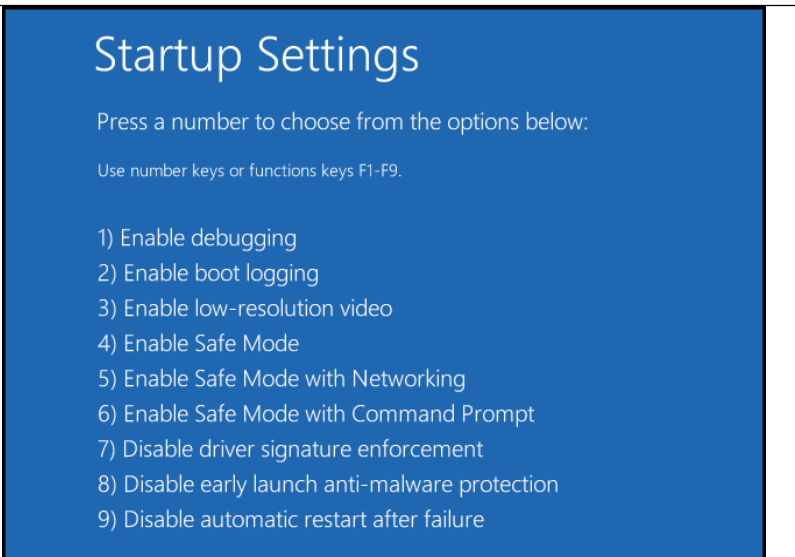
<p>Then Startup Settings.</p>	 <p>The screenshot shows the 'Advanced options' window in Windows. It contains three main sections: 'System Restore' (with a circular arrow icon), 'Startup Settings' (with a gear icon), and 'Startup Repair' (with a gear and checkmark icon). The 'Startup Settings' section is highlighted, showing the option to 'Change Windows startup behavior'.</p>
<p>Since we are modifying boot time configuration settings, you will need to restart your Computer one last time.</p>	 <p>The screenshot shows the 'Restart to change Windows options such as:' screen. It lists several options: Enable low-resolution video mode, Enable debugging mode, Enable boot logging, Enable Safe Mode, Disable driver signature enforcement, Disable early-launch anti-malware protection, and Disable automatic restart on system failure. A 'Restart' button is visible in the bottom right corner.</p>
<p>Finally, you will be given a list of startup settings that you can change. The one we are looking for is "Disable driver signature enforcement". To choose the setting, you will need to press the F7 key. Your PC will then reboot and you will be able to install unsigned drivers without any error message. You should then be able to install the driver for the SPI connector in the standard manner.</p>	 <p>The screenshot shows the 'Startup Settings' window. It prompts the user to 'Press a number to choose from the options below:' and lists 9 options: 1) Enable debugging, 2) Enable boot logging, 3) Enable low-resolution video, 4) Enable Safe Mode, 5) Enable Safe Mode with Networking, 6) Enable Safe Mode with Command Prompt, 7) Disable driver signature enforcement, 8) Disable early launch anti-malware protection, and 9) Disable automatic restart after failure.</p>

How to Disable Driver Signature Verification on Windows 8.1 and 10
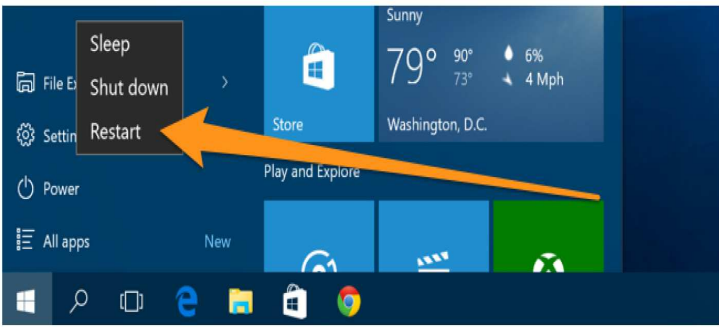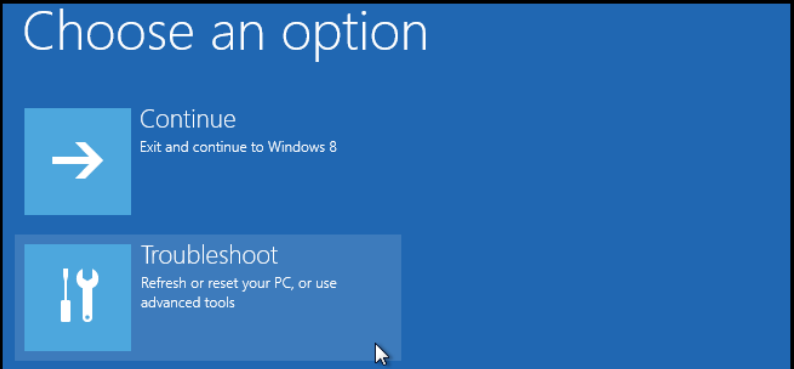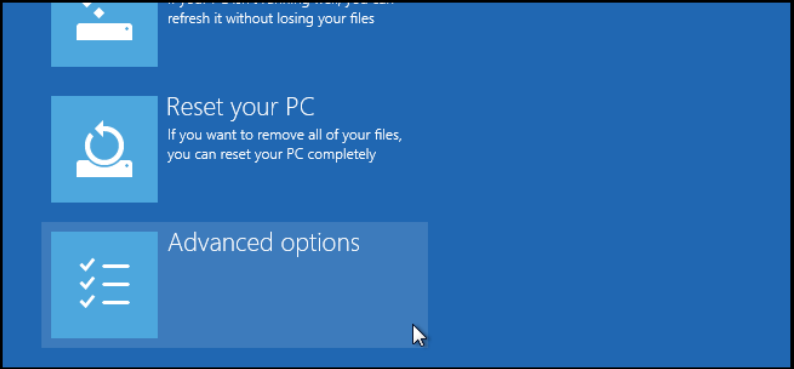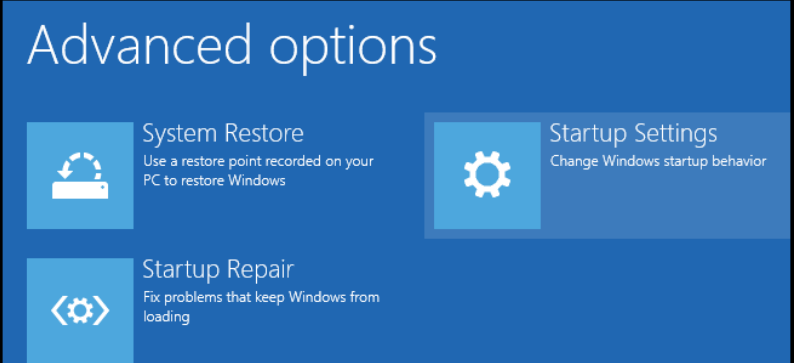
<p>To disable the signature verification it is necessary to get into Troubleshooting options from the boot manager. Select Restart from the power options menu (for Windows 8 this is under Charms on the login screen and on Windows 10 this is on the start Menu. Hold down the shift key whilst clicking restart.</p>	
<p>Once your Computer has rebooted you will need to choose the Troubleshoot option.</p>	
<p>Then head into Advanced options.</p>	
<p>Then Startup Settings.</p>	

Since we are modifying boot time configuration settings, you will need to restart your Computer one last time.

Restart to change Windows options such as:

- Enable low-resolution video mode
- Enable debugging mode
- Enable boot logging
- Enable Safe Mode
- Disable driver signature enforcement
- Disable early-launch anti-malware protection
- Disable automatic restart on system failure

Restart

Finally, you will be given a list of startup settings that you can change. The one we are looking for is "Disable driver signature enforcement". To choose the setting, you will need to press the **F7** key.

Your PC will then reboot and you will be able to install unsigned drivers without any error message. You should then be able to install the driver for the SPI connector in the standard manner.

Startup Settings

Press a number to choose from the options below:

Use number keys or functions keys F1-F9.



- 1) Enable debugging
- 2) Enable boot logging
- 3) Enable low-resolution video
- 4) Enable Safe Mode
- 5) Enable Safe Mode with Networking
- 6) Enable Safe Mode with Command Prompt
- 7) Disable driver signature enforcement
- 8) Disable early launch anti-malware protection
- 9) Disable automatic restart after failure

Appendix C: Updating the Firmware


Firmware is updated on the OPC-N3 device using the supplied Bootloader tool. This will be supplied with the appropriate hex files, when needed. Please note the method is different than with the OPC-N2. Please record the laser setting and ToF to SFR factor before updating the firmware as this may be reset to default, once updated. To upgrade the firmware on your OPC-N3 device requires:

- Bootloader tool
- Alphasense USB to SPI converter
- New firmware upgrade package including the firmware file (.HEX).

To upgrade the firmware file follow the instruction below:
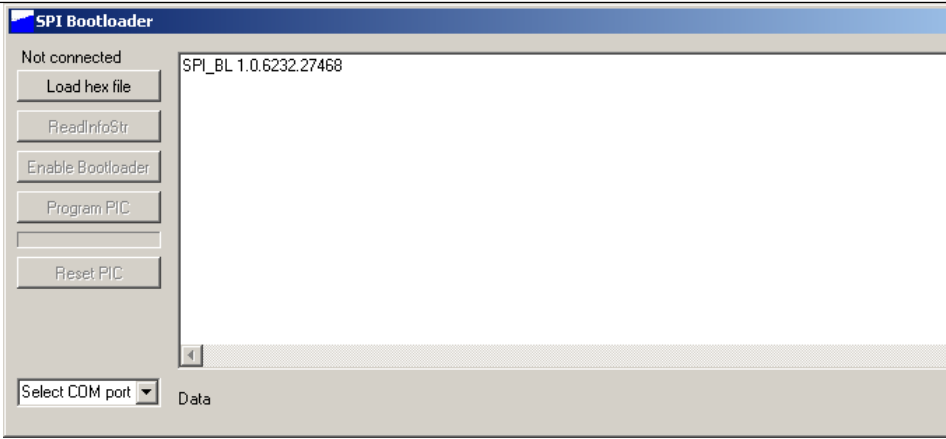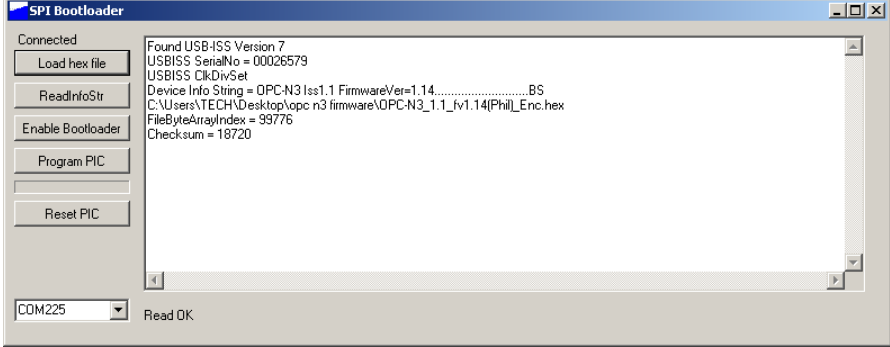
<ol style="list-style-type: none"> 1. Open SPI bootloader software. Connect the OPC-N3 to the computer using the SPI convertor Connect to the correct comms port using the drop down at bottom left 2. Press Enable bootloader 	
<ol style="list-style-type: none"> 3. Press Load hex file and navigate to the new firmware file that needs to be installed. 4. Press Program pic 5. Press Rest pic 6. Select none in the COM port selection box to disconnect the OPC from the bootloader tool 	

7. Re-establish communications with the OPC using the OPC software, this will confirm that the new firmware file has been installed correctly and is ready for use.
8. Press Ctrl+R to check that the displayed config data is upto date and also that the laser DAC settings are returned to the original setting. See the main section of the manual for information on setting EEPROM configuration.

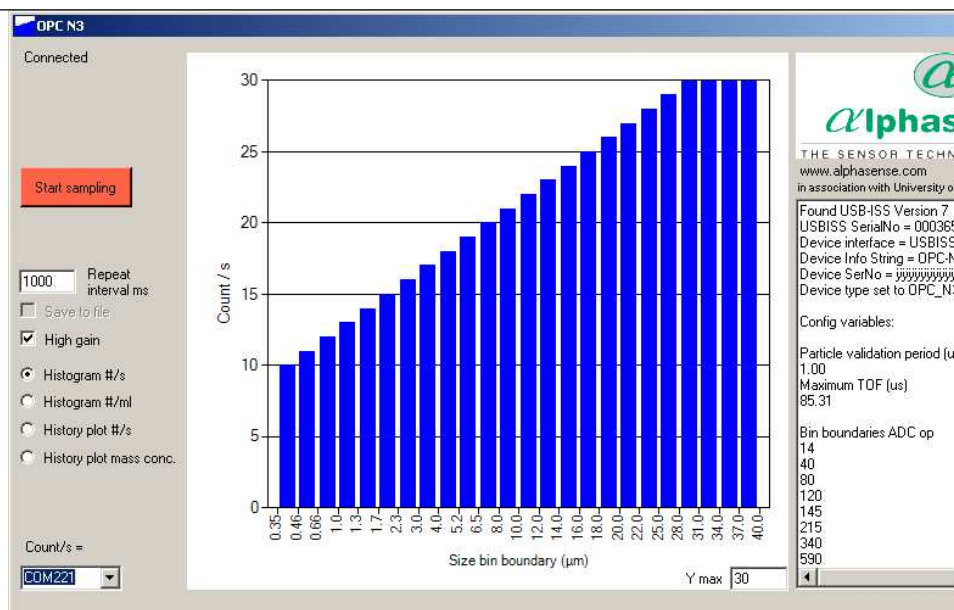

Appendix D: Summary of firmware commands

OPC-N3 SPI functions (from point of view of SPI Master system) for firmware versions 1.14 to 1.17a.

Function	Command byte	Byte(s) out	Byte(s) in (0xF3 is set as standard initial return byte value from OPC-N3)	Notes
Write peripheral power status	0x03	0x03	0x31	Suggest that 10ms be used as delay between command byte and following byte. OptionByte is an 8bit unsigned integer variable. Bit 0 indicates the required power status. The remaining bits select the target peripheral as follows: Before the status bit 0 is applied, if the Option byte is set to the value 1 and then shifted left one bit this will select the 'Fan digital pot shutdown state' as the target. Similarly, if the Option byte is first set to the value 2, this will select 'Laser digital pot shutdown state' as the target. Setting the option byte to 3 will select 'Laser power switch state' and setting to 4 will select 'High/Low gain state'. Only one peripheral can be set at a time. If 'High/Low gain state' is selected, AutoGainToggle will cease until the OPC is next reset.
		0x03	0xF3	
		OptionByte	0x03	
Read DAC and power status	0x13	0x13	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x13	0xF3	

		0x13	Fan_ON	Fan_ON is an 8bit unsigned integer variable.
		0x13	LaserDAC_ON	LaserDAC_ON is an 8bit unsigned integer variable.
		0x13	FanDACval	FanDACval is an 8bit unsigned integer variable.
		0x13	LaserDACval	LaserDACval is an 8bit unsigned integer variable.
		0x13	LaserSwitch	LaserSwitch is an 8bit unsigned integer variable.
		0x13	Gain and AutoGainToggle setting	AutoGainToggle comprises Gain and AutoGainToggle settings. Unsigned 8bit integer.
Set Fan or Laser digital pot	0x42	0x42	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x42	0xF3	
		Channel	0x42	Channel is 0 for Fan, 1 for Laser.
		Digital pot setting	Channel	Digital pot setting is unsigned 8bit integer variable.
Set Bin Weighting Index	0x05	0x05	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x05	0xF3	
		BinWeightingIndex	0x05	BinWeightingIndex (0-10) is an 8bit unsigned integer that represents the index of the preset bin weightings to use.
Read information string	0x3F	0x3F	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x3F	0xF3	
		0x3F	InfoStr ascii char00: "O" (=0x4F)	SerialStr is a string of 60 characters.
		0x3F	InfoStr ascii char01: "P" (=0x50)	Value of shaded bytes doesn't matter.
		0x3F	InfoStr ascii char02: "C" (=0x43)	
		0x3F	InfoStr ascii char03: "-" (=0x2D)	
		0x3F	InfoStr ascii char04: "N" (=0x4E)	
		0x3F	InfoStr ascii char05: "3" (=0x33)	
		0x3F	InfoStr ascii char06: " " (=0x20)	
		0x3F	InfoStr ascii char07: "I" (=0x49)	
		0x3F	InfoStr ascii char08: "s" (=0x73)	
		0x3F	InfoStr ascii char09: "s" (=0x73)	
		0x3F	InfoStr ascii char10: "1" (=0x31)	
		0x3F	InfoStr ascii char11: "." (=0x2E)	
		0x3F	InfoStr ascii char12: "1" (=0x31)	
		0x3F	InfoStr ascii char13: " " (=0x20)	
		0x3F	InfoStr ascii char14: "F" (=0x46)	
		0x3F	InfoStr ascii char15: "i" (=0x69)	
		0x3F	InfoStr ascii char16: "r" (=0x72)	
		0x3F	InfoStr ascii char17: "m" (=0x6D)	
		0x3F	InfoStr ascii char18: "w" (=0x77)	
		0x3F	InfoStr ascii char19: "a" (=0x61)	
		0x3F	InfoStr ascii char20: "r" (=0x72)	
		0x3F	InfoStr ascii char21: "e" (=0x65)	

		0x3F 0x3F 0x3F 0x3F 0x3F 0x3F 0x3F 0x3F 0x3F 0x3F 0x3F	InfoStr ascii char22: "V" (=0x56) InfoStr ascii char23: "e" (=0x65) InfoStr ascii char24: "r" (=0x72) InfoStr ascii char25: "=" (=0x3D) InfoStr ascii char26: "1" (=0x31) InfoStr ascii char27: "." (=0x2E) InfoStr ascii char28: "1" (=0x31) InfoStr ascii char29: "4" (=0x34) InfoStr ascii char59: "S" (=0x53)	See 072-0503 for full details
Read serial number string	0x10	0x10 0x10 0x10 0x10 0x10 0x10	0x31 0xF3 SerialStr ascii char00 SerialStr ascii char01 SerialStr ascii char59	Suggest that 10ms be used as delay between command byte and following byte. SerialStr is a string of 60 characters. Value of shaded bytes doesn't matter. See 072-0503 for full details
Write serial number string	0x11	0x11 0x11 SerialStr ascii char00 SerialStr ascii char01 SerialStr ascii char02 SerialStr ascii char59	0x31 0xF3 0x11 SerialStr ascii char00 SerialStr ascii char58	Suggest that 10ms be used as delay between command byte and following byte. SerialStr is a string of 60 characters. This string can only be written once. See 072-0503 for full details
Read Firmware Version	0x12	0x12 0x12 0x12	0x31 0xF3 FirmwareVerMajor FirmwareVerMinor	Suggest that 10ms be used as delay between command byte and following byte. FirmwareVerMajor is an 8bit unsigned integer variable. FirmwareVerMinor is an 8bit unsigned integer variable.
Read Configuration Variables				See 072-0503 for full details
Write Configuration Variables				See 072-0503 for full details.
Read histogram data (and reset histogram)	0x30	0x30 0x30 0x30 0x30 0x30 0x30 0x30 0x30 0x30	0x31 0xF3 Bin0 LSB Bin0 MSB Bin23 LSB Bin23 MSB Bin1 MToF Bin3 MToF	Suggest that 10ms be used as delay between command byte and following byte. Bin Counts (Bin0 - Bin23) are 16bit unsigned integer variables. Value of shaded bytes doesn't matter. MToF is an 8bit unsigned integer that represents the average amount of time that particles sized in

		0x30	Bin5 MTof	the stated bin took to cross the OPS's laser beam. Each value is in 1/3 us. i.e. a value of 10 would represent 3.33us.
		0x30	Bin7 MTof	
		0x30	Sampling Period LSB	Sampling Period' is a 16bit unsigned integer and is a
		0x30	Sampling Period MSB	measure of the histogram's actual sampling period in seconds x100
		0x30	Sample Flow Rate LSB	Sample Flow Rate' is a 16bit unsigned integer variable that represents the sample flow rate in ml/s x100
		0x30	Sample Flow Rate MSB	
		0x30	Temperature LSB	Temperature is a 16bit unsigned integer.
		0x30	Temperature MSB	
		0x30	Relative humidity LSB	Relative humidity is a 16bit unsigned integer.
		0x30	Relative humidity MSB	
		0x30	PM_A Byte0	PM_A is a float variable occupying 4 bytes. Units are ug/m3.
		0x30	PM_A Byte1	
		0x30	PM_A Byte2	
		0x30	PM_A Byte3	
		0x30	PM_B Byte0	PM_B is a float variable occupying 4 bytes. Units are ug/m3.
		0x30	PM_B Byte1	
		0x30	PM_B Byte2	
		0x30	PM_B Byte3	
		0x30	PM_C Byte0	PM_C is a float variable occupying 4 bytes. Units are ug/m3.
		0x30	PM_C Byte1	
		0x30	PM_C Byte2	
		0x30	PM_C Byte3	
		0x30	Reject count Glitch LSB	Reject count Glitch' is a 16bit unsigned integer.
		0x30	Reject count Glitch MSB	
		0x30	Reject count LongTOF LSB	Reject count LongTOF' is a 16bit unsigned integer.
		0x30	Reject count LongTOF MSB	
		0x30	Reject count Ratio LSB	Reject count Ratio' is a 16bit unsigned integer.
		0x30	Reject count Ratio MSB	
		0x30	Reject count OutOfRange LSB	Reject count Ratio' is a 16bit unsigned integer.
		0x30	Reject count OutOfRange MSB	
		0x30	Fan rev count LSB	Fan rev count' is a 16bit unsigned integer.
		0x30	Fan rev count MSB	
		0x30	Laser status LSB	Laser status' is a 16bit unsigned integer.
		0x30	Laser status MSB	
		0x30	Checksum LSB	Checksum is a 16bit unsigned integer.
		0x30	Checksum MSB	
Read PM data (and reset histogram)	0x32	0x32	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x32	0xF3	
		0x32	PM_A Byte0	PM_A is a float variable occupying 4

		0x32	PM_A Byte1	bytes. Units are ug/m3.
		0x32	PM_A Byte2	
		0x32	PM_A Byte3	
		0x32	PM_B Byte0	PM_B is a float variable occupying 4 bytes. Units are ug/m3.
		0x32	PM_B Byte1	
		0x32	PM_B Byte2	
		0x32	PM_B Byte3	
		0x32	PM_C Byte0	PM_C is a float variable occupying 4 bytes. Units are ug/m3.
		0x32	PM_C Byte1	
		0x32	PM_C Byte2	
		0x32	PM_C Byte3	
		0x32	Checksum Byte0	Checksum is a 16bit unsigned integer.
		0x32	Checksum Byte1	
Save Configuration Variables in non-volatile memory	0x43	0x43	0x31	Suggest that 10ms be used as delay between command byte and following byte.
		0x43	0xF3	
		0x3F	0x43	Initial command byte must be followed by sequence of bytes (shown in red).
		0x3C	0x3F	
		0x3F	0x3C	
		0x3C	0x3F	
		0x43	0x3C	
Check Status	0xCF	0xCF	0x31	
		0xCF	0xF3	
Reset	0x06	0x06	0x31	
		0x06	0xF3	
Enter bootloader mode	0x41	0x41	0x31	
		0x41	0xF3	

In response to any initial command byte, the OPC-N3 should return a byte of value 0x31, indicating it is busy.

Upon receiving a command byte OPC-N3 will stop its activities and prepare data for a response if required.

During this period, until the response data is ready, if further bytes are sent to the OPC-N3, the returned byte will continue to be 0x31 (busy). When the OPC-N3 has prepared its response data it will load the SPI buffer with a byte value 0xF3 to indicate it is ready to transfer data. The command byte value must remain consistent with the original command byte value sent for the command to be validated by the OPC-N3. If it is not, the OPC-N3 will load the SPI buffer with 0x31 (busy) value and return to its normal mode of operation. THE SAMPLING TRIGGER WILL NOT BE ARMED IF THIS OCCURS. Rearming of the trigger can be achieved by a successful histogram or PM data request.

To communicate with the OPC-N3, the SPI master should poll the OPC-N3 with the command byte value, checking the returned byte for the value 0x31 (busy) or 0xF3 (ready). The first returned byte should always be 0x31 (busy). Subsequent returned bytes will either be 0x31 (busy) or 0xF3 (ready) depending on the status of the OPC-N3. If another byte value is received by the SPI master at this stage, an error has occurred and communication should cease for > 2s to allow the OPC-N3 to realise the error and clear its buffered data. The SPI master should also clear any buffered data.

In general, it is suggested that the command byte polling interval is 10 ms and the delay between byte transfers following a receipt of byte value 0xF3 (ready) is 10 μ s.

Appendix E Checksum

A 16-bit CRC checksum is transmitted after each histogram data set, which can be used, if desired, to verify the data sent. If the OPC is configured to only transmit PM data, a checksum will still accompany this data.

The CRC calculation is a 16-bit method similar to that used in MODBUS communication. It uses the generator polynomial value 0xA001 and is initialised to 0xFFFF. Example 'C' programming code showing how the checksum can be recalculated is shown.

```
unsigned int CalcCRC(unsigned char data[], unsigned char nbrOfBytes)
{
#define POLYNOMIAL 0xA001 //Generator polynomial for CRC
#define InitCRCval 0xFFFF //Initial CRC value

unsigned char _bit; // bit mask
unsigned int crc = InitCRCval; // initialise calculated checksum
unsigned char byteCtr; // byte counter

// calculates 16-Bit checksum with given polynomial
for(byteCtr = 0; byteCtr < nbrOfBytes; byteCtr++)
{
    crc ^= (unsigned int)data[byteCtr];
    for(_bit = 0; _bit < 8; _bit++)
    {
        if (crc & 1) //if bit0 of crc is 1
        {
            crc >>= 1;
            crc ^= POLYNOMIAL;
        }
        else
            crc >>= 1;
    }
}
return crc;
}
```

End of Manual